

Sales & Service:




9200 GALE ROAD
WHITE LAKE, MI 48386

248-886-8646

www.BarnesAsso.com

INSTRUCTIONS FOR SHORTENING THE LIFT TUBE:

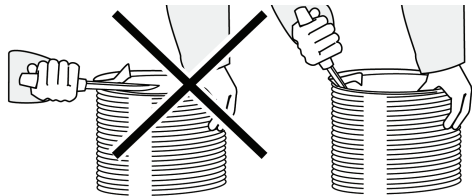

Undo the protective sock by the control unit, remove the black tape and unscrew the lift tube from the plastic adapter. Measure the amount the lift tube has to be shortened to give the Vaculex VL the correct height above the ground.

1. Cut the lift tube and cut the steel wire away.
2. Excess fabric and orange tape should be cut away. By using the procedure shown in the illustration, you will be able to do this without having the steel wire escape from the rest of the fabric.
3. Remove approximately 20 mm of orange tape around the steel wire.
4. Remove about 2 turns of the white thread around the cut end.
5. Screw the lift tube back onto the plastic adapter.
6. Then tape around the lift tube and plastic adapter with reinforced tape. The tape should be tightly stretched.